 
 
 
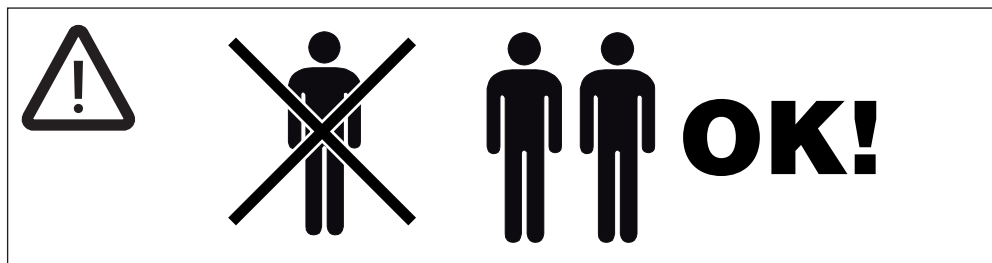 
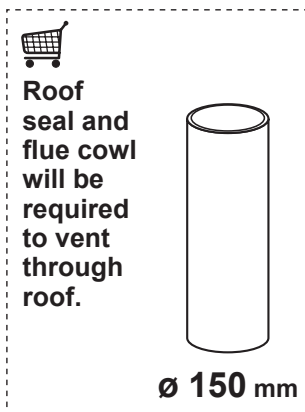 


EN INSTALLATION MANUAL

Warning! Before proceeding with installation, read the safety information in the User Manual.

 
 
 
 
 
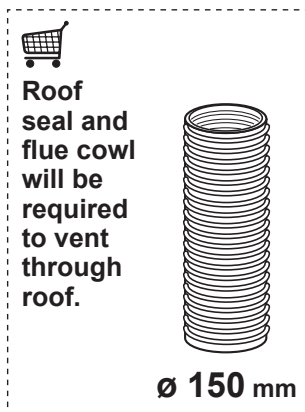 


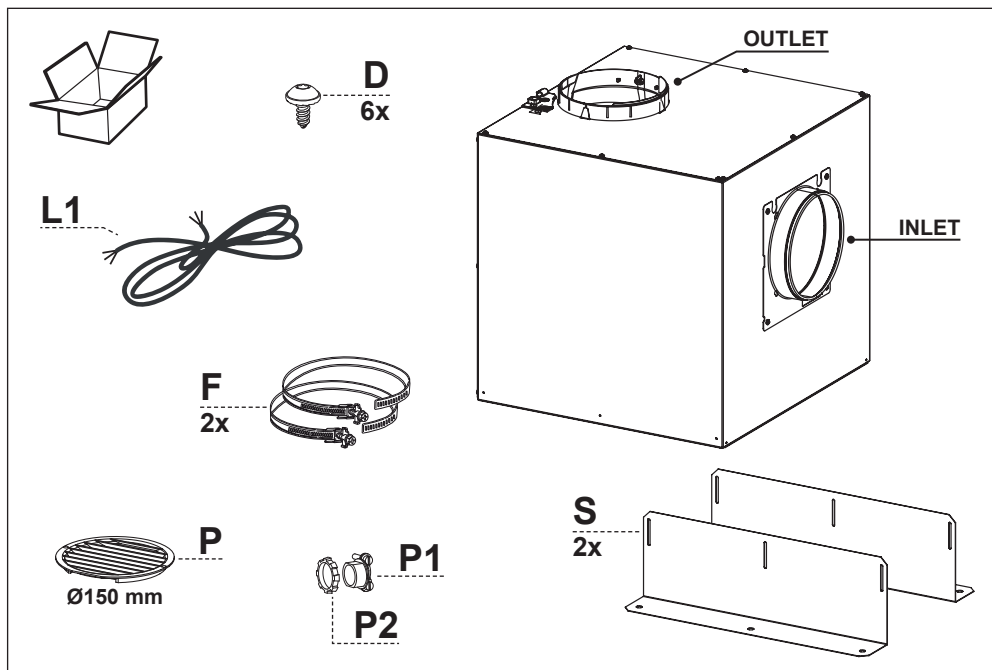

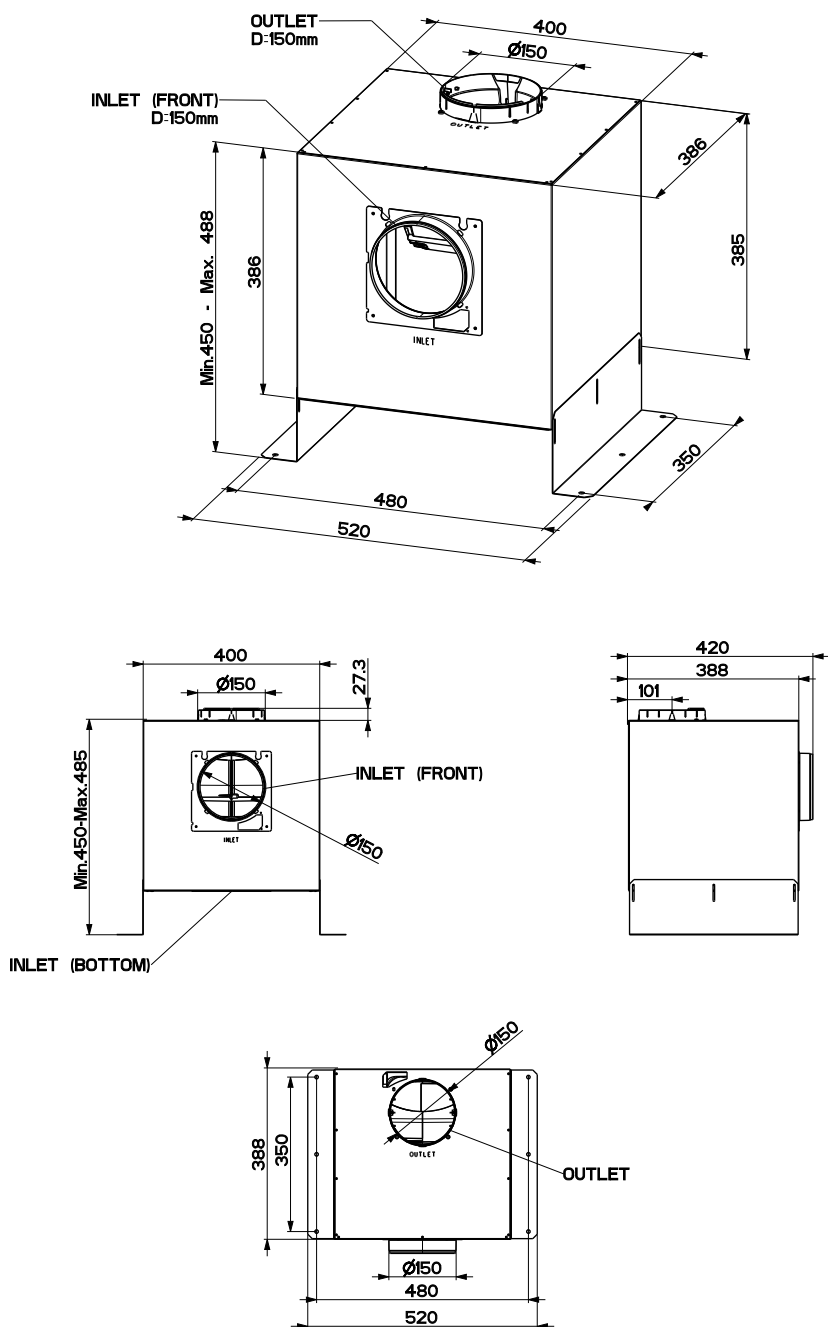





ROOF SEAL AND ROOF COWL TO BE SOURCED LOCALLY FOR EXTERNAL VENT THROUGH ROOF.

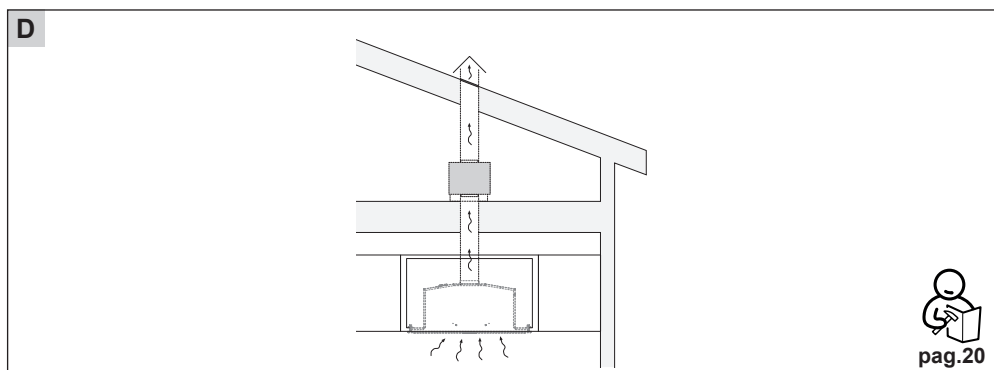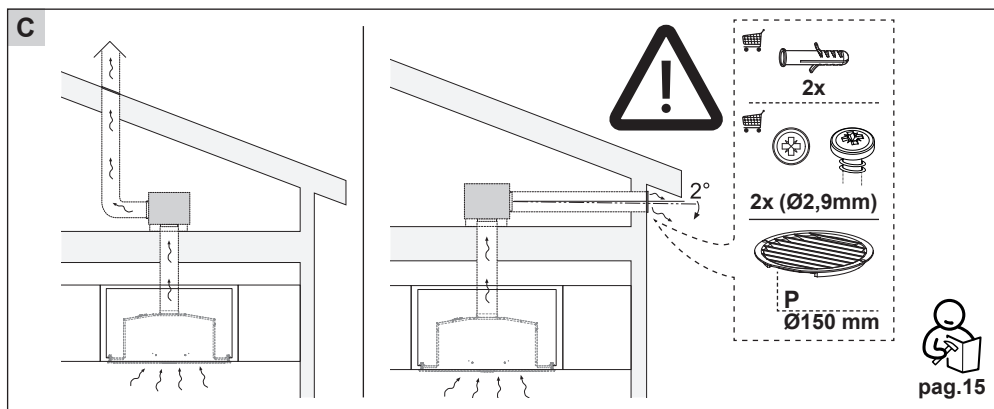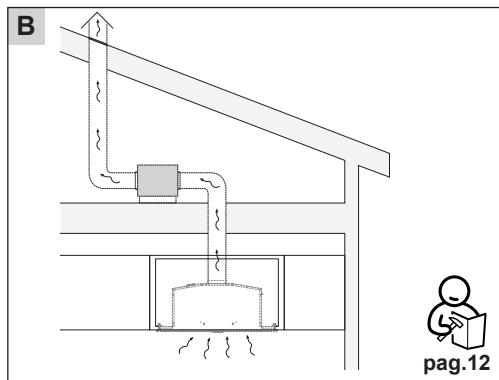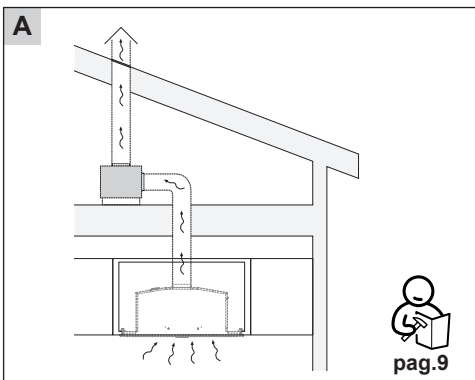


1

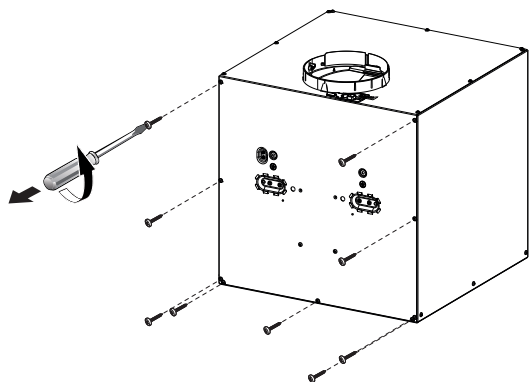 






2

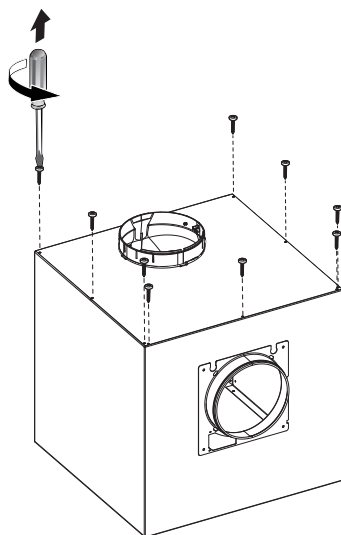 



3

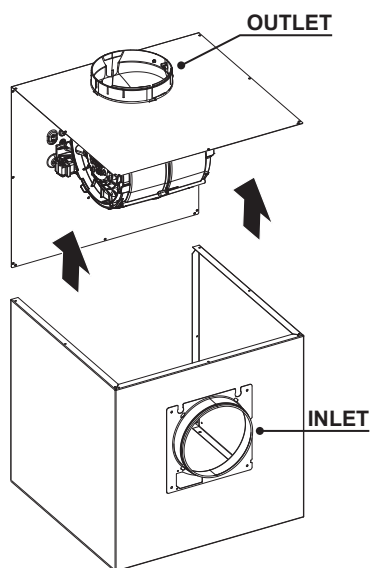 

4

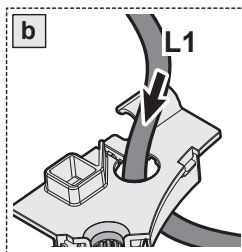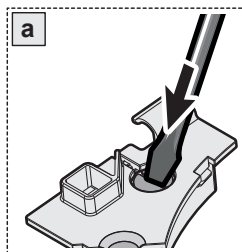  
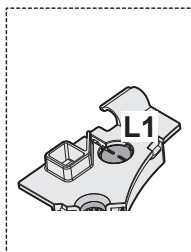 
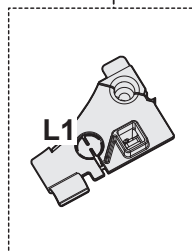 
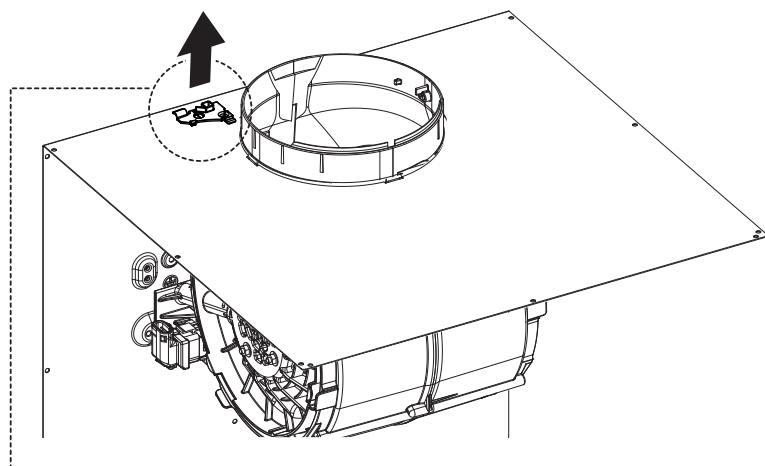 


5

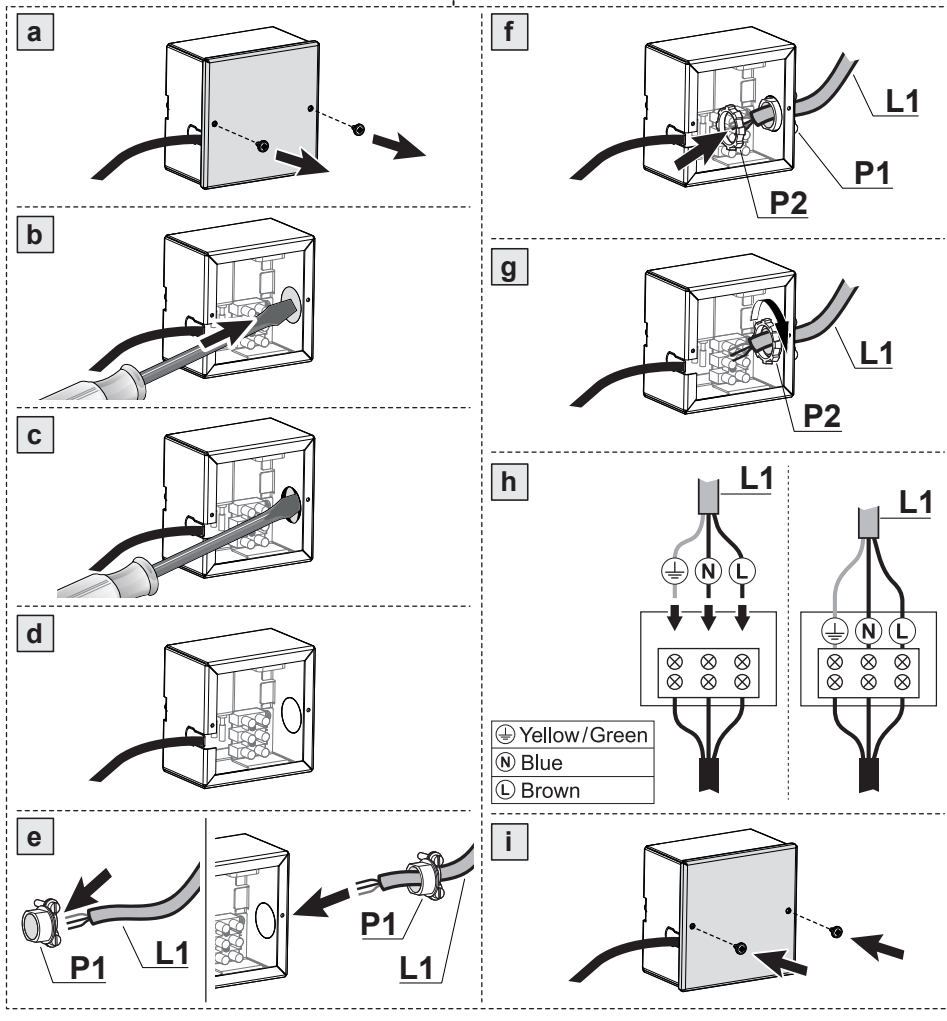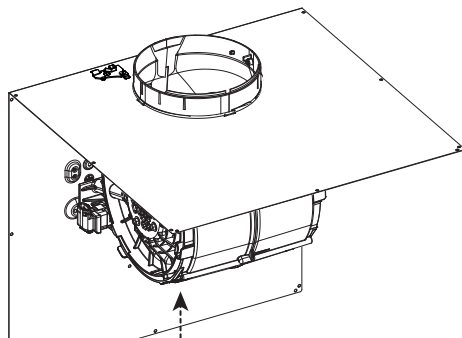  


A

    
**ROOF SEAL AND ROOF COWL
TO BE SOURCED LOCALLY
FOR EXTERNAL VENT
THROUGH ROOF.**

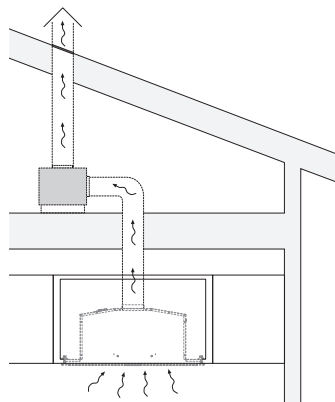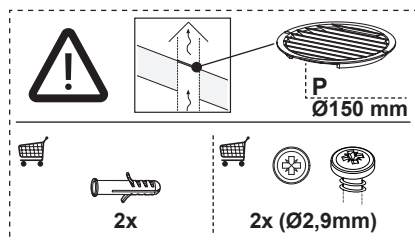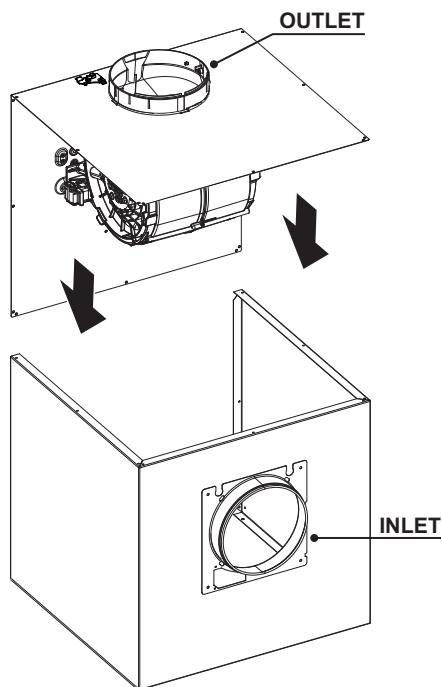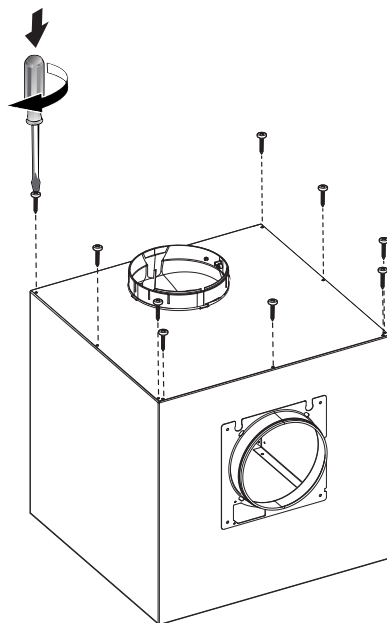**A.1****A.2**

 
A.3

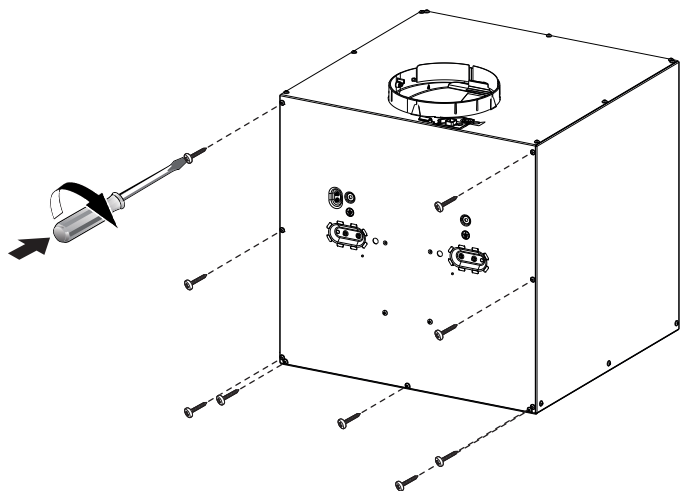

A.4


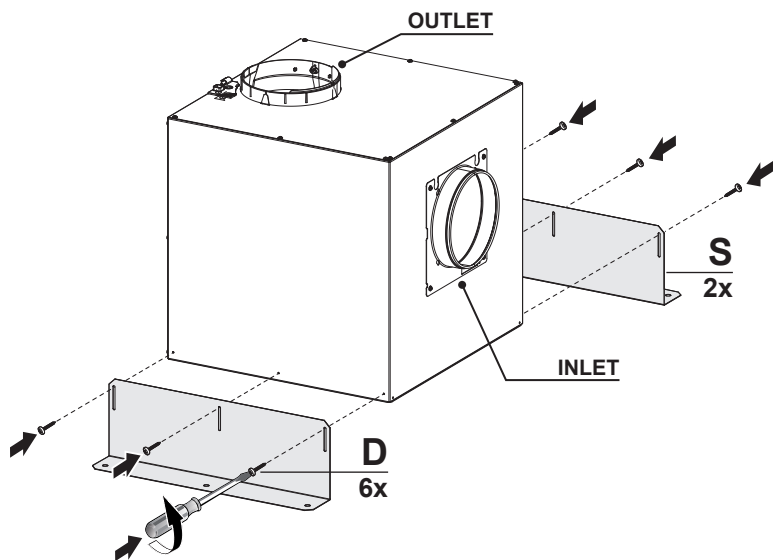 


 - A.5**
- Flue going through roof will need to be solid (not semi rigid).
 - Roof seal to be sourced locally.
 - Flue cowl to be sourced locally.

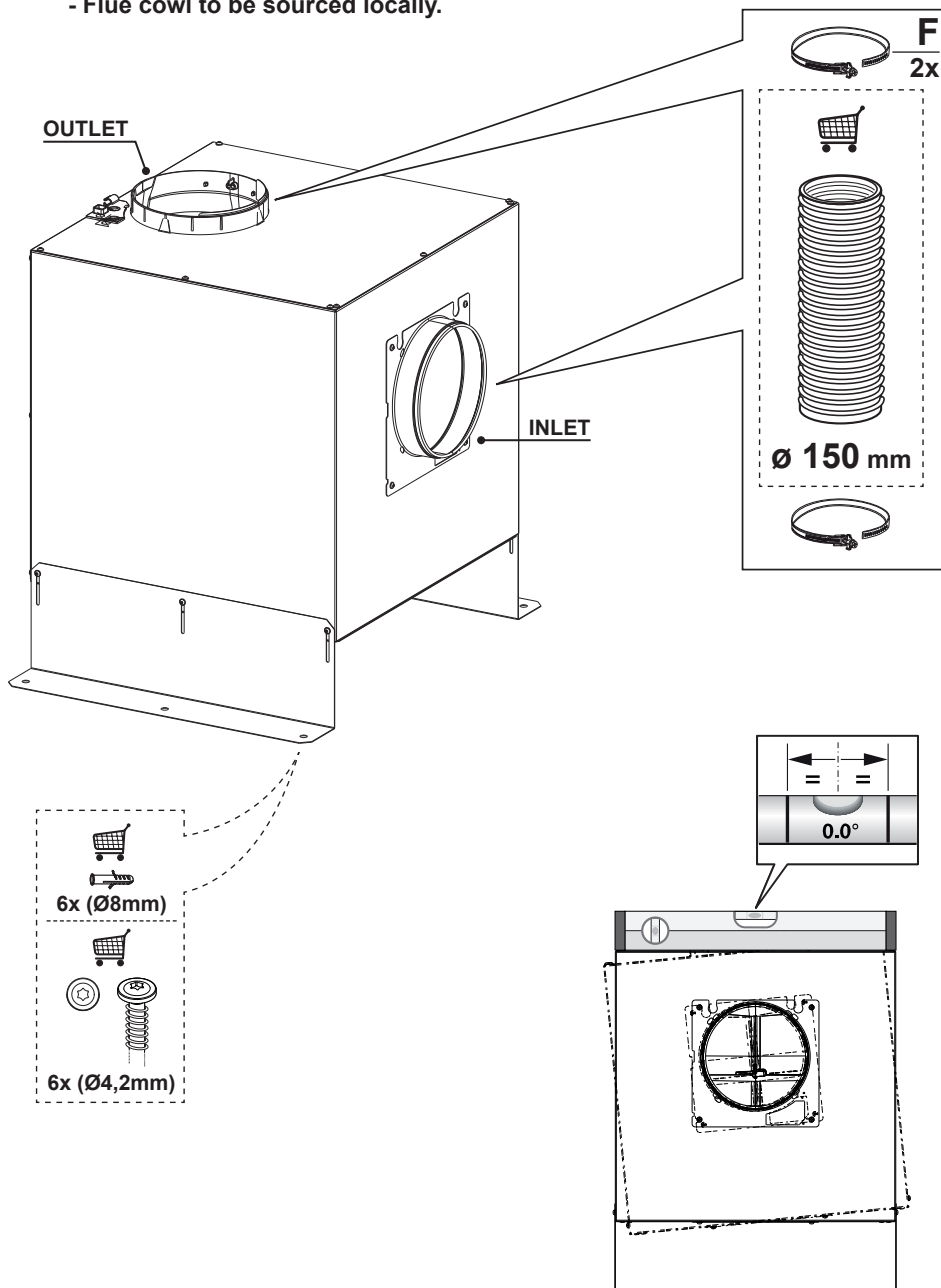


B

  
**ROOF SEAL AND ROOF COWL
TO BE SOURCED LOCALLY
FOR EXTERNAL VENT
THROUGH ROOF.**

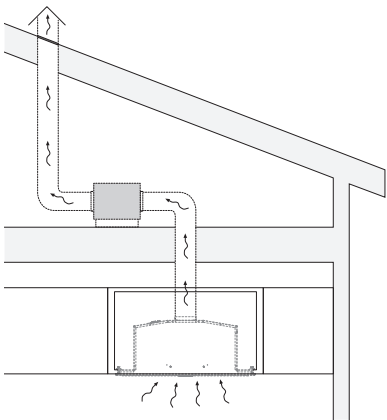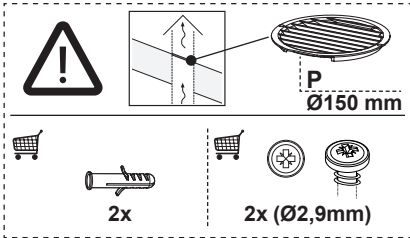


B.1

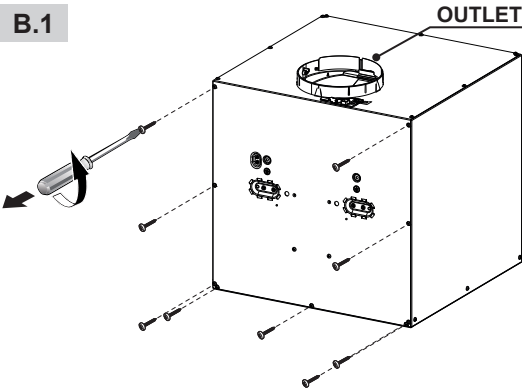 


B.2

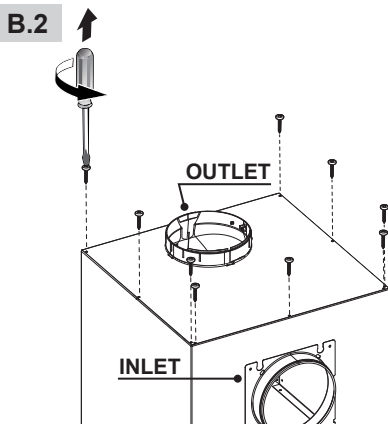 


B.3

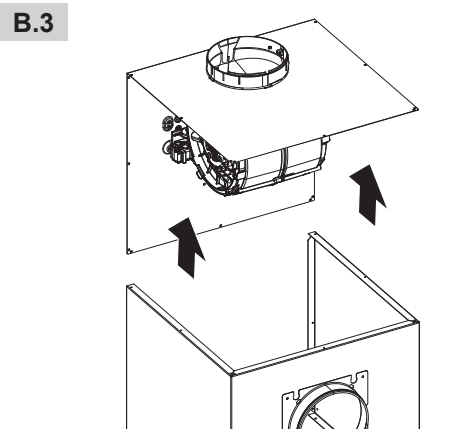 


B.4

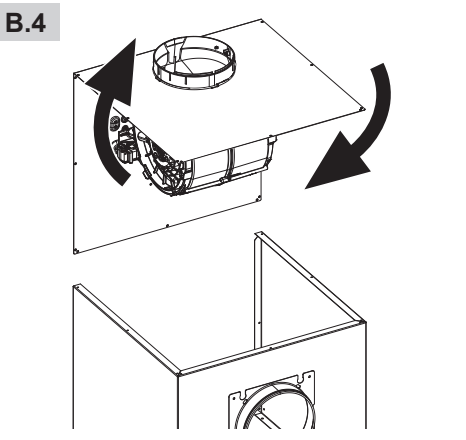 


B.5

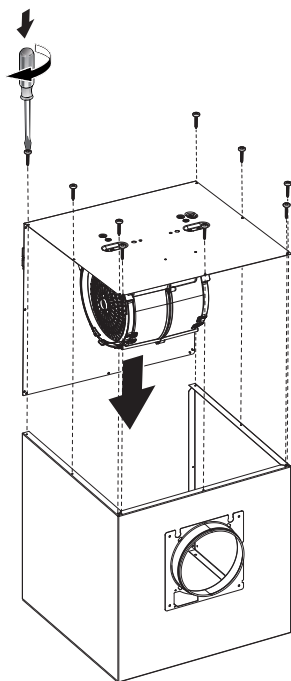 


B.6

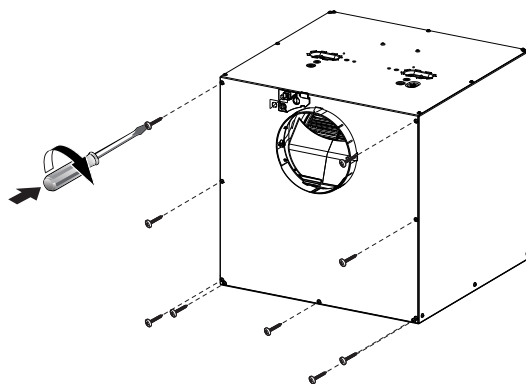 




B.7

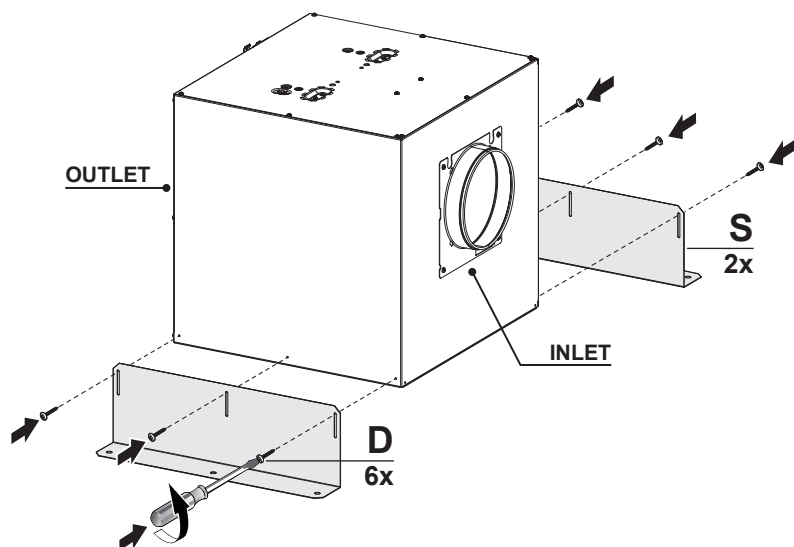 

 
- B.8**
- Flue going through roof will need to be solid (not semi rigid).
 - Roof seal to be sourced locally.
 - Flue cowl to be sourced locally.

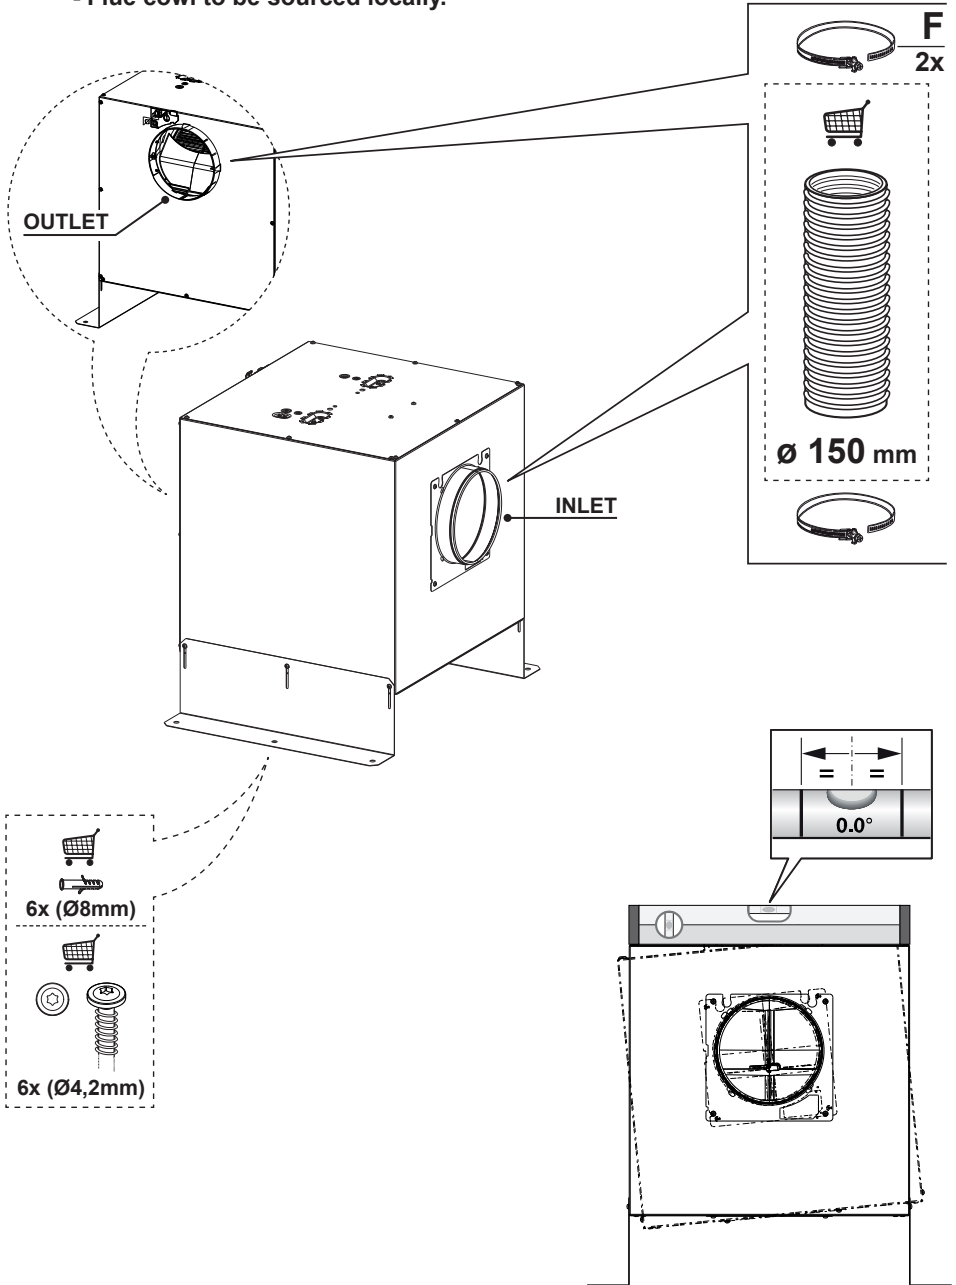

   
C ROOF SEAL AND ROOF COWL TO BE SOURCED LOCALLY FOR EXTERNAL VENT THROUGH ROOF.


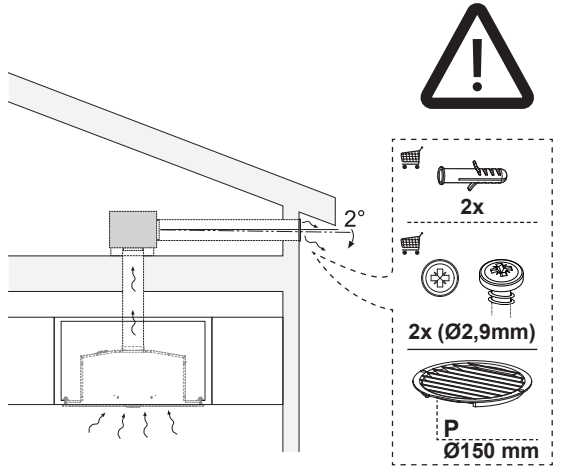
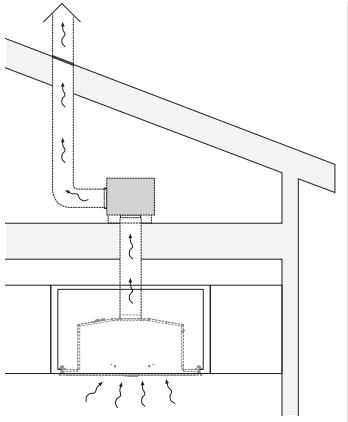
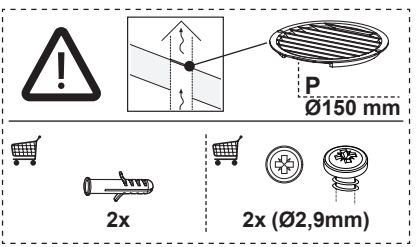


C.1

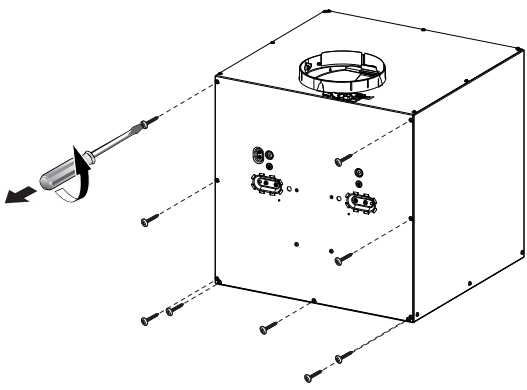 


C.2

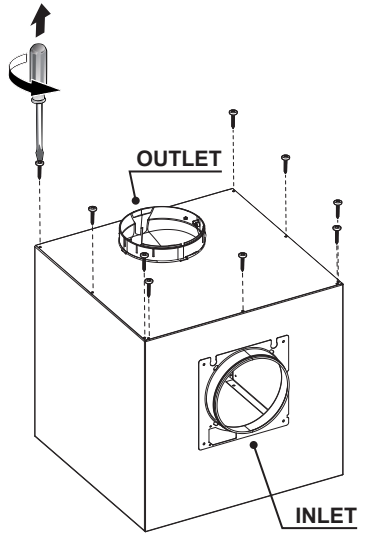 


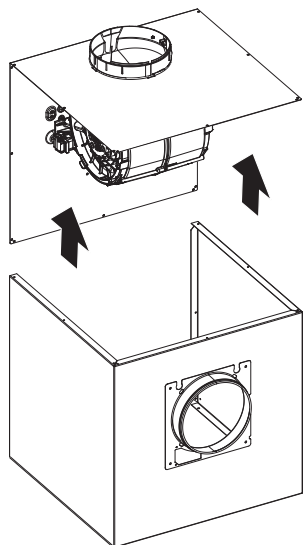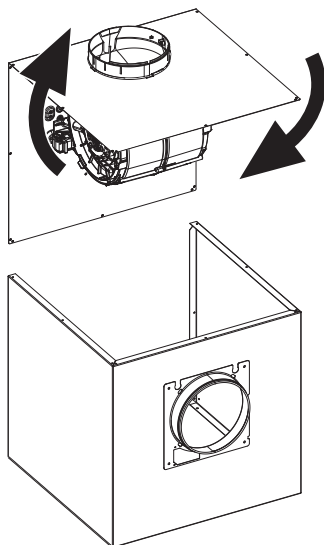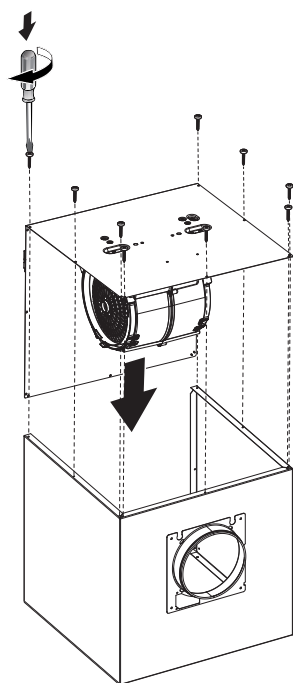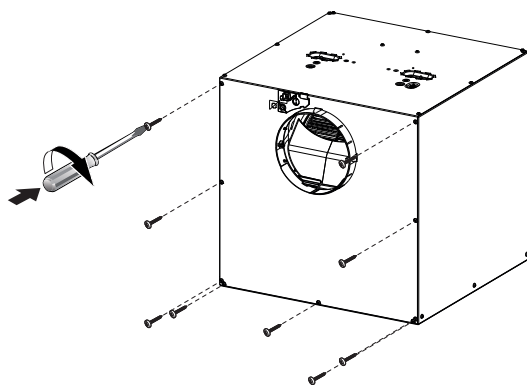    C.3**C.4****C.5****C.6**

 
C.7

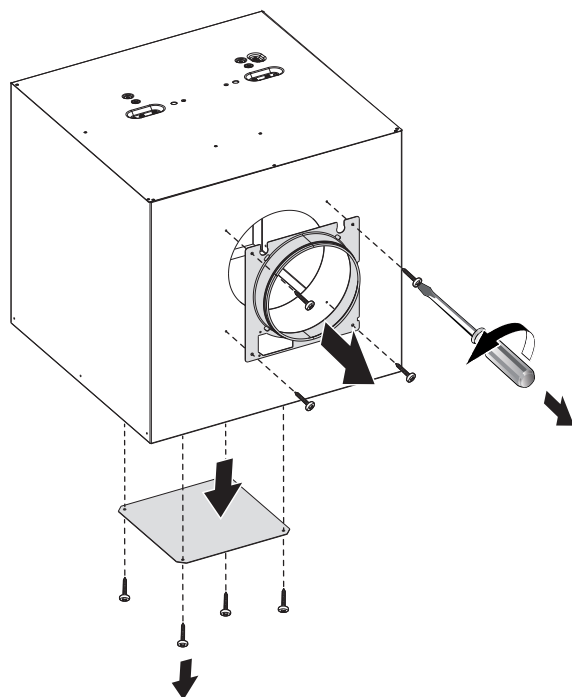


C.8

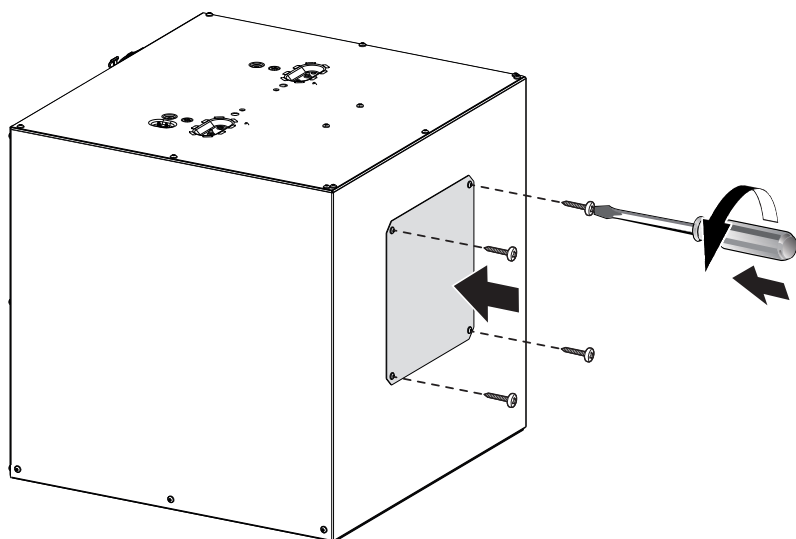 


C.9

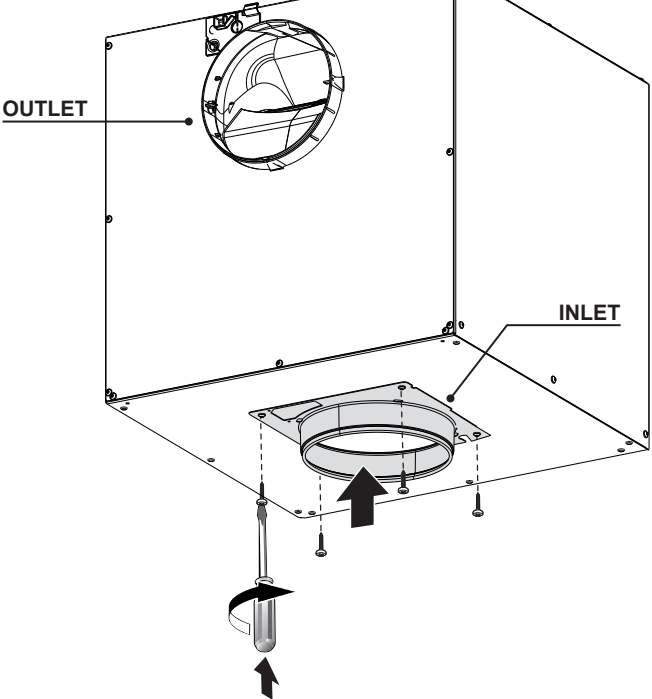 

C.10


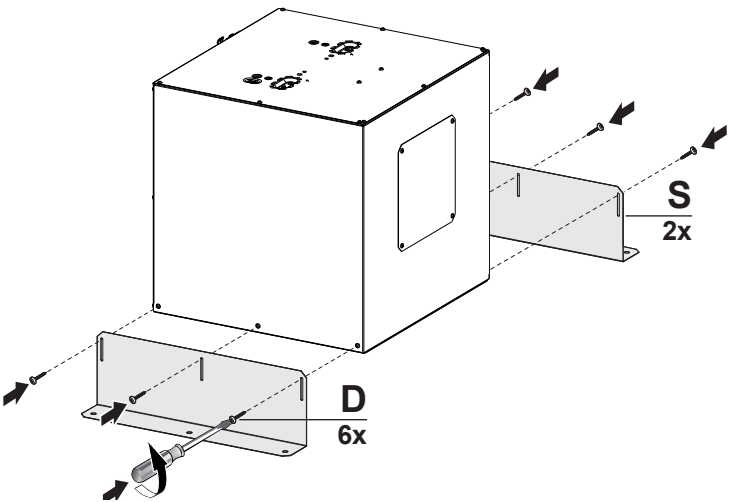 


 - C.11**
- Flue going through roof will need to be solid (not semi rigid).
 - Roof seal to be sourced locally.
 - Flue cowl to be sourced locally.

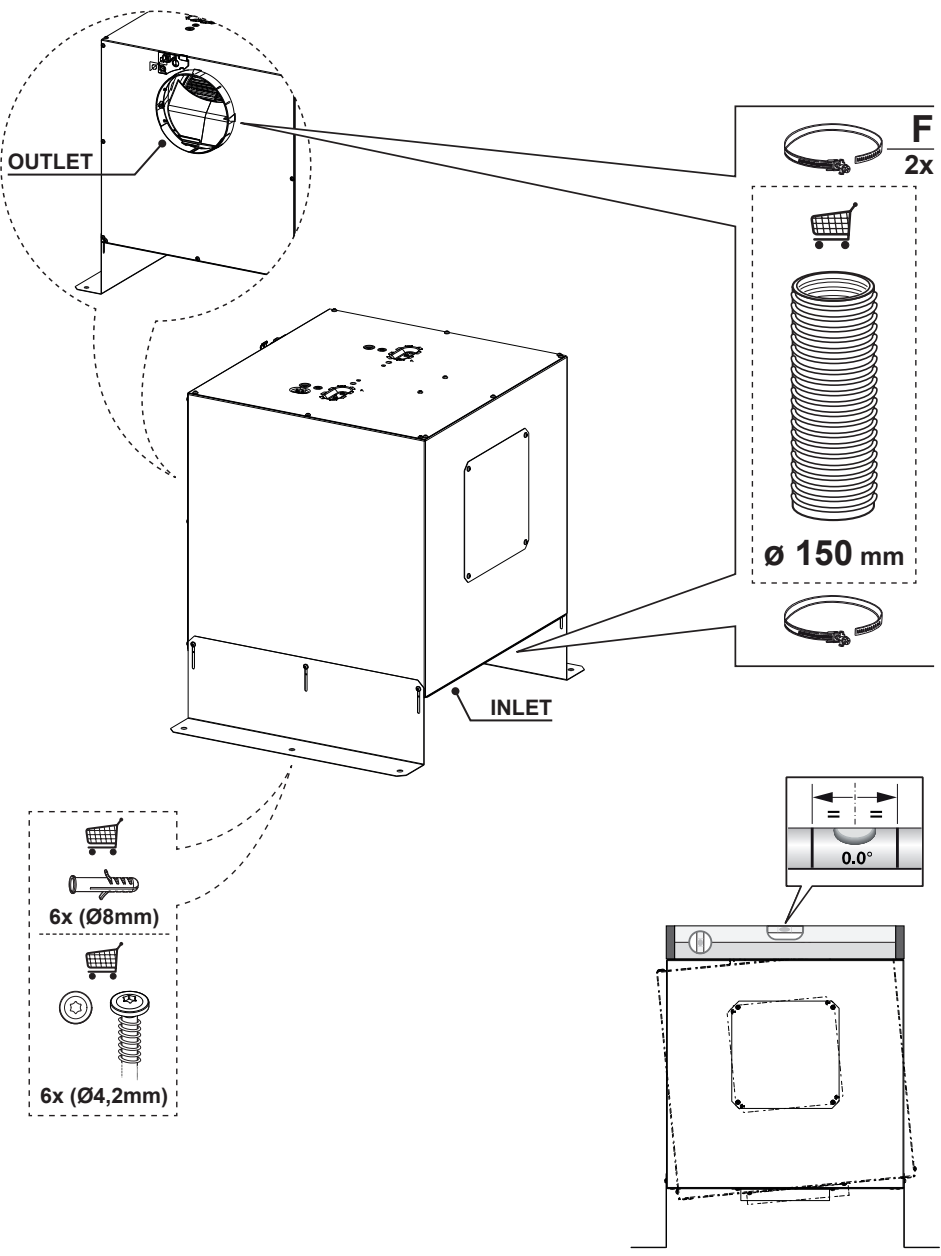


D

  
**ROOF SEAL AND ROOF COWL
TO BE SOURCED LOCALLY
FOR EXTERNAL VENT
THROUGH ROOF.**

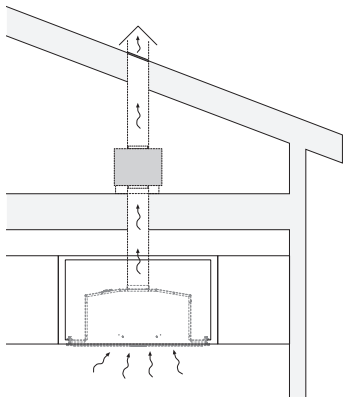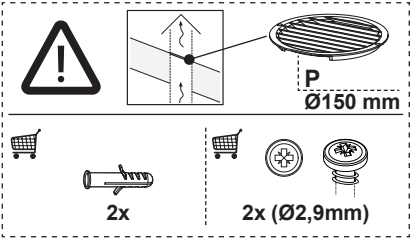


D.1

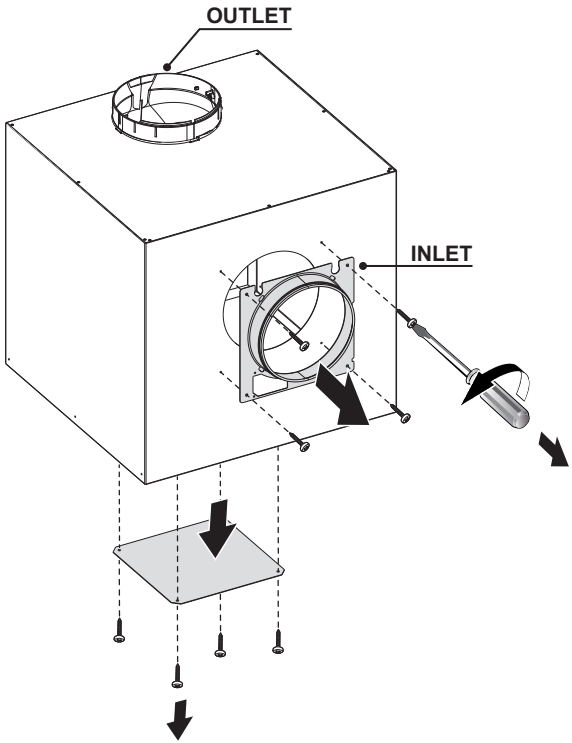 


D.2

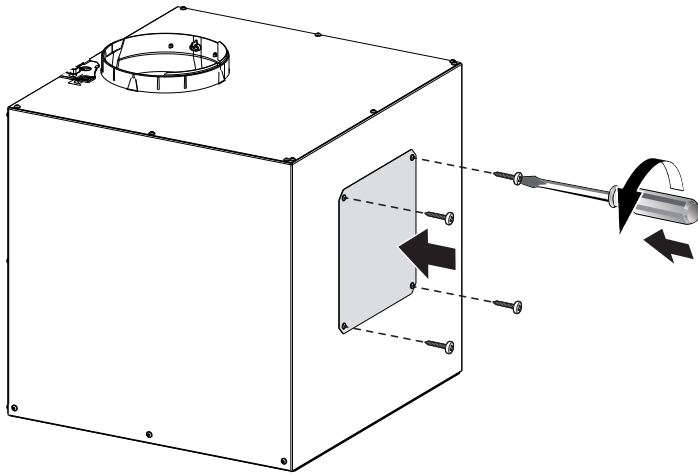 

D.3

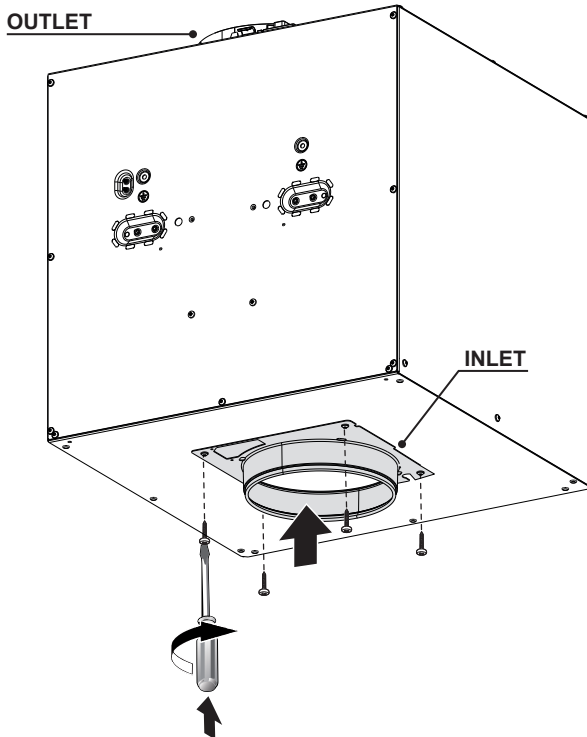 


D.4

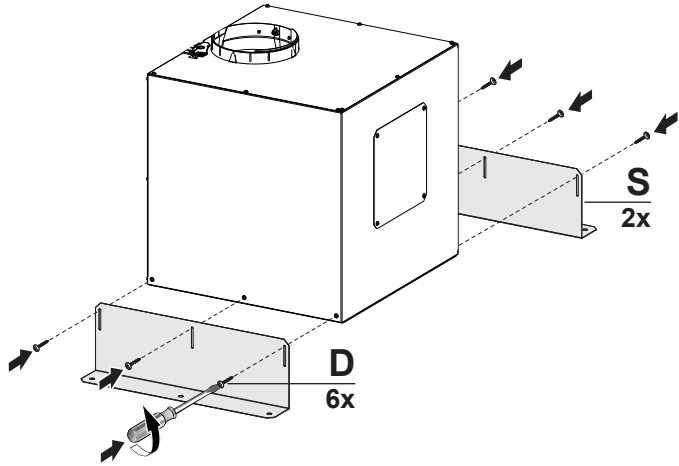 

D.5

- Flue going through roof will need to be solid (not semi rigid).
- Roof seal to be sourced locally.
- Flue cowl to be sourced locally.


 
OUTLET

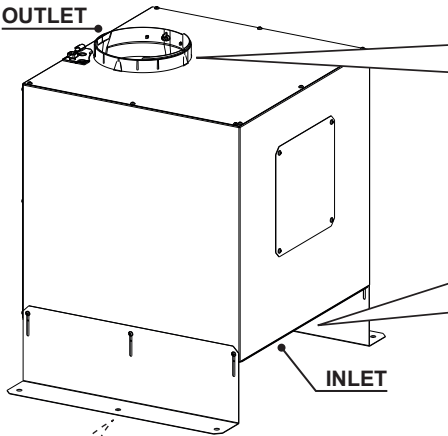


F
2x



  Ø 150 mm

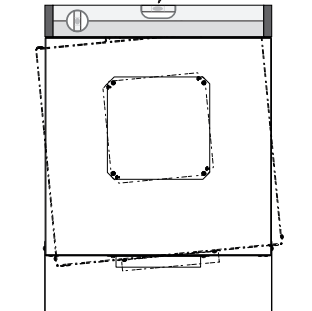

6x (Ø8mm)

 

6x (Ø4,2mm)

